

EL-Skyport Plus HS for Canon

[Firmware-version 1.5](#)

<ul style="list-style-type: none">• 100D• 400D• 450D(Kiss X2)• 500D(Kiss X3)• 550D• 600D• 650D• 700D• 750D• 760D• 1200D• 1300D• 20D• 30D• 40D	<ul style="list-style-type: none">• 60D• 70D• 80D• 5D• 5D Mark II• 5D Mark III• 5D Mark IV• 5Ds• 6D• 7D• 7D Mark II• 1D• 1D Mark II• 1D Mark III• 1D Mark IV	<ul style="list-style-type: none">• 1D Mark IIN• 1DS• 1DS• Mark II• 1DS Mark III• 1DX• G1X• G1XII• G6 *• G12• EOS M• EOS M2• EOS M3
---	--	---

***Ej kompatibla med Hi-Sync**

EL-Skyport Plus HS for Nikon

[Firmware V. 1.5](#)

<ul style="list-style-type: none">• D40 *• D40X *• D60 *• D70 *• D70S *• D90 *• D200• D300• D300S• D3200 *• D3300 *• D3400 *	<ul style="list-style-type: none">• D5000 *• D5100 *• D5200 *• D5300 *• D5500 *• D7000• D7100• D7200• D500 *• D600 *• D610 *• D700	<ul style="list-style-type: none">• D750• D800• D810• D850• D2HS• D2X• D2XS• D3• D3X• D3S• D4• D5
---	---	--

***Ej kompatibla med Hi-Sync**

EL-Skyport Plus HS for Sony

[Firmware V.1.3](#)

<ul style="list-style-type: none">• A33• A37• A55• A57• A7• A7 II *• A7r• A7r II *• A7s• A7s II *• A77	<ul style="list-style-type: none">• A77II• A9• A99 *• A100• A230• A290• A330• A350• A380• A390• A450	<ul style="list-style-type: none">• A500• A550• A560• A580• A700• A850• A6000• A6300• RX1• NEX-7K
--	--	--

***Kan ge viss fördröjning i avtrycket/exponering pga autofokus- och TTL-kommunikation (påverkar inte bildkvaliteten)**

EL-Skyport Plus HS for Olympus and Panasonic

[Firmware V.1.3](#)

Olympus	Panasonic	
<ul style="list-style-type: none">• E-M1• E-M5 Mark II• E-M5• E-M10 Mark II• E-M10• PEN-F• E-P5• E-PL7• E-PL6• E-PL5• E-PM2• E-5• E-410	<ul style="list-style-type: none">• G7• GX85• GX8• GH4• LX100• FZ300	