

## Nikon

|                          |               |
|--------------------------|---------------|
| <b>1 AW1</b>             | Ej kompatibel |
| <b>1 J1</b>              | Ej kompatibel |
| <b>1 J2</b>              | Ej kompatibel |
| <b>1 J3</b>              | Ej kompatibel |
| <b>1 S1</b>              | Ej kompatibel |
| <b>1 V1</b>              | Ej kompatibel |
| <b>D1</b>                | CABLE-N1      |
| <b>D1H</b>               | CABLE-N1      |
| <b>D1X</b>               | CABLE-N1      |
| <b>D100</b>              | Ej kompatibel |
| <b>D100(med MB-D100)</b> | CABLE-N1      |
| <b>D2</b>                | CABLE-N1      |
| <b>D200</b>              | CABLE-N1      |
| <b>D2H</b>               | CABLE-N1      |
| <b>D2HS</b>              | CABLE-N1      |
| <b>D2X</b>               | CABLE-N1      |
| <b>D2XS</b>              | CABLE-N1      |
| <b>D3</b>                | CABLE-N1      |
| <b>D3s</b>               | CABLE-N1      |

|              |               |
|--------------|---------------|
| <b>D3X</b>   | CABLE-N1      |
| <b>D300</b>  | CABLE-N1      |
| <b>D3000</b> | Ej kompatibel |
| <b>D300S</b> | CABLE-N1      |
| <b>D4</b>    | CABLE-N1      |
| <b>D4S</b>   | CABLE-N1      |
| <b>D5</b>    | CABLE-N1      |
| <b>D40</b>   | Ej kompatibel |
| <b>D40X</b>  | Ej kompatibel |
| <b>D50</b>   | Ej kompatibel |
|              |               |
| <b>D500</b>  | CABLE-N1      |
| <b>D60</b>   | Ej kompatibel |
| <b>D70</b>   | Ej kompatibel |
| <b>D90</b>   | CABLE-N3      |
| <b>D600</b>  | CABLE-N3      |
| <b>D610</b>  | CABLE-N3      |
| <b>D700</b>  | CABLE-N1      |
| <b>D750</b>  | CABLE-N3      |
| <b>D800</b>  | CABLE-N1      |

|                      |          |
|----------------------|----------|
| <b>D800 E</b>        | CABLE-N1 |
| <b>D810</b>          | CABLE-N1 |
| <b>D850</b>          | CABLE-N1 |
| <b>D3100</b>         | CABLE-N3 |
| <b>D3200</b>         | CABLE-N3 |
| <b>D3300</b>         | CABLE-N3 |
| <b>D5000</b>         | CABLE-N3 |
| <b>D5100</b>         | CABLE-N3 |
| <b>D5200</b>         | CABLE-N3 |
| <b>D5300</b>         | CABLE-N3 |
|                      |          |
| <b>D5500</b>         | CABLE-N3 |
| <b>D7000</b>         | CABLE-N3 |
| <b>D7100</b>         | CABLE-N3 |
| <b>D7200</b>         | CABLE-N3 |
| <b>Df</b>            | CABLE-N3 |
| <b>Coolpix P7700</b> | CABLE-N3 |
| <b>Coolpix P7800</b> | CABLE-N3 |